

ForwardValue

This logic simply forwards the value of item to another one.

Inputs

- SourceID (ItemID): Source Item

Outputs

- DestinationID (ItemID): Destination Item

Possible trigger types

- All

Available since:

NETx BMS Server 2.0