

Can I plug the USB dongle to a licensing server in the network?

No. The USB dongle must be connected to the physical machine where your software is running on.

Additional information: Some PC visualization vendors provide means to link a USB device to a virtual machine. However, it is not possible to share the dongle among multiple VMs. There are also USB-via-Ethernet solutions on the market. Please understand that we cannot provide support for these products. Please consider obtaining a softlock license!

Related articles

- [XDB_ENGINE; Connect to SysDatabase failed. \(NETx BMS Server 2.0\)](#)
 - [bms-server](#)
 - [error-message-description](#)
 - [database](#)
- [What kind of MS SQL Server license do I need? \(NETx BMS Server 2.0\)](#)
 - [bms-server](#)
 - [database](#)
 - [sql](#)
- [WEB_SERVER; Can't start server on IP Address\(es\) <IP-Address> and Port: <port> \(NETx BMS Server 2.0\)](#)
 - [bms-server](#)
 - [error-message-description](#)
- [VNET_SERVER: Listing Socket E03. Server could not be initialized \(E5177\) \(NETx BMS Server 2.0\)](#)
 - [bms-server](#)
 - [error-message-description](#)
 - [vnet](#)
- [OPC Client callback function failed \(NETx BMS Server 2.0\)](#)
 - [bms-server](#)
 - [error-message-description](#)